



HAL
open science

Crystallization of polypropylene at high cooling rates

Séverine A.E. Boyer, Jean-Marc Haudin

► **To cite this version:**

Séverine A.E. Boyer, Jean-Marc Haudin. Crystallization of polypropylene at high cooling rates. 12th ESAFORM Conference on Material Forming, Apr 2009, Enschede, Netherlands. pp.Pages 857-860, <10.1007/s12289-009-0631-5>. <hal-00509429>

HAL Id: hal-00509429

<https://minesparis-psl.hal.science/hal-00509429v1>

Submitted on 12 Aug 2010

HAL is a multi-disciplinary open access archive for the deposit and dissemination of scientific research documents, whether they are published or not. The documents may come from teaching and research institutions in France or abroad, or from public or private research centers.

L'archive ouverte pluridisciplinaire HAL, est destinée au dépôt et à la diffusion de documents scientifiques de niveau recherche, publiés ou non, émanant des établissements d'enseignement et de recherche français ou étrangers, des laboratoires publics ou privés.



HAL Authorization

CRYSTALLIZATION OF POLYPROPYLENE AT HIGH COOLING RATES

J.M. Haudin ^{1*}, S.A.E. Boyer ^{1**}

¹MINES Paris-Tech, CEMEF – Centre de Mise en Forme des Matériaux, CNRS UMR 7635, 1 Rue Claude Daunesse, 06904 Sophia Antipolis Cedex, France

ABSTRACT: In the context of polymer crystallization under high and constant cooling rates, a new survey is presented. The growth kinetics of spherulites from the molten state and the corresponding temperature of crystallization under similar cooling rates are considered. An industrial grade of isotactic polypropylene (iPP) is investigated in the range of slow (from 1 to 10 °C/min), of relatively moderate (from 30 to 500 °C/min) and of high (from 500 to 1600 °C/min) constant cooling rates. The growth kinetics for the α -modification of iPP *versus* the temperature of crystallization is in agreement with the data published by Janeschitz-Kriegl [Macromolecules, 2006]. To understand the growth mechanism, the Hoffman equation is used and then extrapolated to lower temperatures of crystallization. Finally, to describe the non-isothermal crystallization, the equation of Ozawa is used. The benefits to use the spherulitic growth kinetics to extrapolate data from alternative methods, i.e., differential scanning calorimetry (DSC), are briefly discussed.

KEYWORDS: Industrial Processes, Liquid to Solid Transition, Isotactic Polypropylene, Kinetics, Polarized Optical Microscopy, Differential Scanning Calorimetry

1 INTRODUCTION

Liquid to solid transition of polymers at high cooling rates has to be well documented in order to be modeled and implemented in simulation codes describing the relationships between polymers and thermo-mechanical conditions encountered in processing conditions, like in injection-molding [1]. If we focus the work on thermal effects, the attractive point supposes to adopt cooling procedures comparable with those undergone by the polymer during processing and to reproduce them. An approach is to consider that crystallization mechanism understanding requires a minimum of information on growth kinetics at the spherulitic scale.

The present study is concerned with the crystallization behavior under high and constant cooling rates from 50 to 1600 °C/min. For that purpose, a novel approach involving a new home-made set-up named « Polymer High Cooling – Optics » is introduced. The optical set-up recently developed in our laboratory [2] has been revisited [3]. It allows us to determine the temperature of crystallization together with the spherulitic growth kinetics *versus* constant cooling rates. The extraction of the parameters is done by classical methods. A comparison with literature data is established. In order to model the non-isothermal crystallization from Ozawa equation, the benefits to use the spherulitic growth kinetics to extrapolate data from an additional method, i.e., DSC, are briefly discussed.

2 OVERVIEW OF HIGH COOLING POLYMER CRYSTALLIZATION

2.1 POLYMER CRYSTALLIZATION THEORIES

At the spherulitic scale and in quiescent conditions, polymer crystallization is described by means of nucleation and growth, or in a more global manner by the overall kinetics. The nucleation and growth steps are used for the overall description, e.g., in the approaches developed by Kolmogoroff, Avrami and Evans [1]. These approaches are generally used in isothermal conditions. Description of non-isothermal crystallization uses Ozawa equation [4], which is derived from Evans theory [5]. Attempts to describe growth mechanism were several times proposed by Hoffman and Lauritzen [6]. Their model still remains the only one satisfactory.

2.2 SPECIFIC EXPERIMENTAL SET-UPS

Techniques for measuring rates of crystallization have been the subject of reviews. The phase change has to be monitored *in real-time* from a direct observation of the structure development or from an effect resulting from the structure development, e.g., a thermal effect. To observe the structure development under high cooling rates, special hot stages must be constructed and appropriate methods proposed. For instance, Ding & Spruiell [7] proposed a light-depolarizing microscopy

* Corresponding author: MINES ParisTech, Tel :33 493 95 (75 03)*, (75 65)**, Fax: 33 492 38 97 52
Email address: Jean-Marc.HAUDIN@mines-paristech.fr *
Email address: Severine.BOYER@mines-paristech.fr **

(LDM) technique for studying crystallization of a polymer film, 150 μm in thickness, at average cooling rates up to 5000 $^{\circ}\text{C}/\text{min}$. Brucato, Piccarolo and Titomanlio proposed a general experimental route involving the recording of the thermal history of a thin polymer film, 50-100 μm in thickness, and the detection of depolarized light intensities in the course of polymer crystallization [8]. Very high cooling rates up to 2000 $^{\circ}\text{C}/\text{s}$ were attained.

The structure development can be characterized from thermal analysis by means of Differential Scanning Calorimetry (DSC). For instance, Pijpers *et al.* have shown that DSC can be used at rates up to 500 K/min [9] to study the rate-dependent phenomena *in real-time*; but no more investigation were done. To attain higher cooling rates, an ultra-fast thin film calorimeter, or nanocalorimeter, was proposed by Adamovsky & Schick [10-13]. Rates of more than 1000 K/s can be attained, both in cooling and in heating modes.

3 EXPERIMENTAL SECTION

3.1 MATERIAL

One isotactic polypropylene (iPP) grade for injection molding was chosen because it produces spherulites easily observable by optical microscopy. The commercial reference is 3250 MR1 (ATOFINA Company, France) (now named PPH9081, TOTAL PETROCHEMICALS) with a weight average molecular weight M_w of 213000 g/mol and a polydispersity PD of 5. The sample is a film of 50 μm in thickness.

3.2 NEW “POLYMER HIGH COOLING” SET-UP

A newly developed and revisited hot stage was used. The technique combines a special designed optically transparent hot-stage together with a polarizing optical microscopy system.

3.2.1 Polarizing Optical Microscopy

The *one-line* monitoring of the structural evolution uses optical light microscopy, with a LEICA-DMRX microscope (Leica-Microsystemes, France). Crystalline entities are observed between crossed polarizers, +/- 90 $^{\circ}$ rotated. A digital CMOS camera is used for the *one-line* monitoring.

3.2.2 Thermal control of the polymer sample

With the choice of a transparent hot-stage as a framework, *in-situ* observation of the crystallization is achieved. The polymer is placed between a pair of thin microscope glasses. It is heated and cooled down by a gaseous flowing supplied at a constant temperature. The thermo-sensor is inserted into the polymer film to eliminate lag time between the polymer and the heat transfer medium. Careful attention was paid to locate the thermo-sensor very near to the optical observation area. These positions ensure a realistic polymer temperature. Relatively stable temperature conditions for the sample were provided as illustrated in Figure 1. The thermal protocol was: *i*) rapidly heating the sample to about 215

$^{\circ}\text{C}$, *ii*) about 90 s holding at 215 $^{\circ}\text{C}$ to erase the thermal history and to avoid its degradation, enabling thus the processing of the sample for many cycles, *iii*) cooling at various cooling rates \dot{T} .

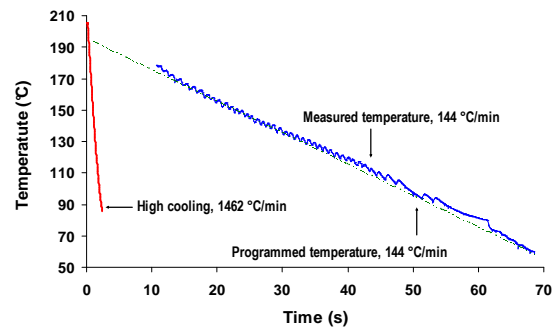


Figure 1: Temperature-time evolution of iPP sample at a constant programmed cooling rate of 144 $^{\circ}\text{C}/\text{min}$ and at a high cooling rate of 1462 $^{\circ}\text{C}/\text{min}$ using the mode ‘all-or-none’.

3.2.3 Sequence and acquisition

A Labview program was especially written in order to program the cooling rates, the temperature profile of the sample and the monitoring of optical observation. Two cooling modes are possible: a proportional one using a rotating throttle to control constant cooling rates at relatively moderate values (from 30 to 500 $^{\circ}\text{C}/\text{min}$) and an ‘all-or-none’ one using an ‘open-close’ valve for cold flux to attain high cooling rates (from 500 to 1600 $^{\circ}\text{C}/\text{min}$).

4 RESULTS & DISCUSSIONS

Different films of iPP were investigated in a broad range of slow (from 3 to 10 $^{\circ}\text{C}/\text{min}$) with a conventional Mettler hot-stage, of relatively moderate (from 30 to 500 $^{\circ}\text{C}/\text{min}$) and of high (from 500 to 1600 $^{\circ}\text{C}/\text{min}$) cooling rates. Figure 2 shows the structure development investigated with the newly developed « Polymer High Cooling – Optics » set-up. The two cooling processes are illustrated, i.e., relatively moderate rates as shown at 144 $^{\circ}\text{C}/\text{min}$ (Figure 2a) and high cooling rates as shown at 1462 $^{\circ}\text{C}/\text{min}$ (Figure 2b).

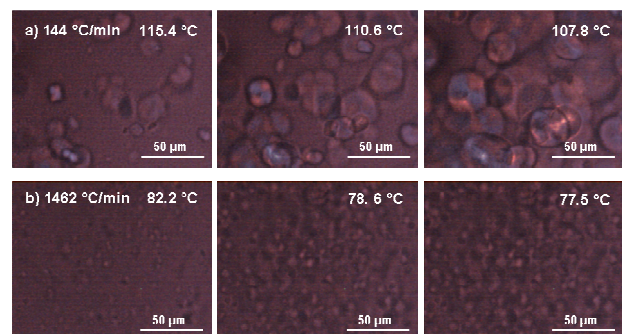


Figure 2: Development of iPP spherulites at a constant cooling rate a) 144 $^{\circ}\text{C}/\text{min}$ and b) 1462 $^{\circ}\text{C}/\text{min}$. Two different iPP films were used.

5 CONCLUSIONS

The major task of the present paper is to tackle the polymer growth kinetics under high cooling rates. A newly developed and revisited set-up, named « Polymer High Cooling – Optics », first generation in date, was employed. It allows us to simultaneously follow the polymer temperature and the radial growth of spherulites during cooling rates up to 1600 °C/min. The spherulitic growth rate follows the typical bell-shaped dependence with the temperature of crystallization in a broad range. The benefits are to use the newly plotted growth kinetics G versus the temperature of crystallization T_c to extrapolate the Ozawa model constructed for the overall kinetics of crystallization.

At present, the control of the kinetics of crystallization from the melt at higher cooling rates, higher than 1600 °C/min, would be of interest especially to conclude or not on the bell-shape of growth kinetics. It would be needed to think about a second generation of « Polymer High Cooling – Optics » set-up.

Nevertheless, additional analysis of the acquired data, i.e., optimization of the growth kinetics, estimation of the density of nuclei when it is possible, would be used for implementation into new crystallization models and then into numerical simulation.

ACKNOWLEDGEMENT

Acknowledgements are presented to the CEMEF technical team for their support during the revisit of the set-up. Perkin-Elmer company is also acknowledged for specific DSC experiments

REFERENCES

- [1] J.-M. Haudin, J.-L. Chenot. Numerical and physical modelling of polymer crystallization. *Intern. Polym. Process.*, 19: 267-274, 2004.
- [2] E. Da Passano, B. Monasse, *MINES ParisTech report*, September 2006
- [3] M. Brisebourg, S.A.E. Boyer, *MINES ParisTech report*, September 2008
- [4] T. Ozawa. Kinetics of non-isothermal crystallization. *Polymer*, 12: 150-158, 1971.
- [5] U.R. Evans. The laws of expanding circles and spheres in relation to the lateral growth of surface films and the grain-size of metals. *Trans. Faraday Soc.*, 41:365-375, 1945.
- [6] J.I. Lauritzen Jr., J.D. Hoffman. Theory of formation of polymer crystals with folded chains in dilute solution. *J. Res. Natl. Bur. Stand. A*, 64:73-102, 1960.
- [7] Z. Ding, J.E. Spruiell. An experimental method for studying nonisothermal crystallization of polymers at very high cooling rates. *J. Polym. Sci. B. Polym. Phys.*, 34:2783-2804, 1996.
- [8] G. Lamberti, F. De Santis, V. Brucato, G. Titomanlio. Modeling the interactions between light and crystallization polymer during fast cooling. *Appl. Phys. A*, 78:895-901, 2004.
- [9] T.F.J. Pijpers, V.B.F. Mathot, B. Goderis, R.L. Scherrenberg, E.W. Van Der Vegte. High-speed calorimetry for the study of the kinetics of (de)vitrification, crystallization, and melting of macromolecules. *Macromolecules*, 35:3601-3613, 2002.
- [10] S.A. Adamovsky, C. Schick. Ultra-fast isothermal calorimetry using thin film sensors. *Thermochim. Acta*, 415:1-7, 2004.
- [11] S.A. Adamovsky, A.A. Minakov, C. Schick. *Thermochim. Acta*, 403:55-63, 2003.
- [12] A.A. Minakov, S.A. Adamovsky, C. Schick. *Thermochim. Acta*, 432:177-185, 2005.
- [13] A. Gradys, P. Sajkiewicz, A.A. Minakov, S. Adamovsky, C. Schick, T. Hashimoto. K. Saijo, Crystallization of polypropylene at various cooling rates. *Mater. Sci. Eng.*, A413-414: 442-446 (2005).
- [14] H. Janeschitz-Kriegl. Phases of flow-induced crystallization of i-PP: how remote pieces of the puzzle appear to fit. *Macromolecules*, 39:4448-4454, 2006.
- [15] J. Xu, S. Srinivas, H. Marand, P. Agarwal. Equilibrium melting and undercooling dependence of the spherulitic growth rate of isotactic polypropylene. *Macromolecules*, 31:8230-8242, 1998.